


TTPM2 Ticket Printer/Encoder

Operators' Guide

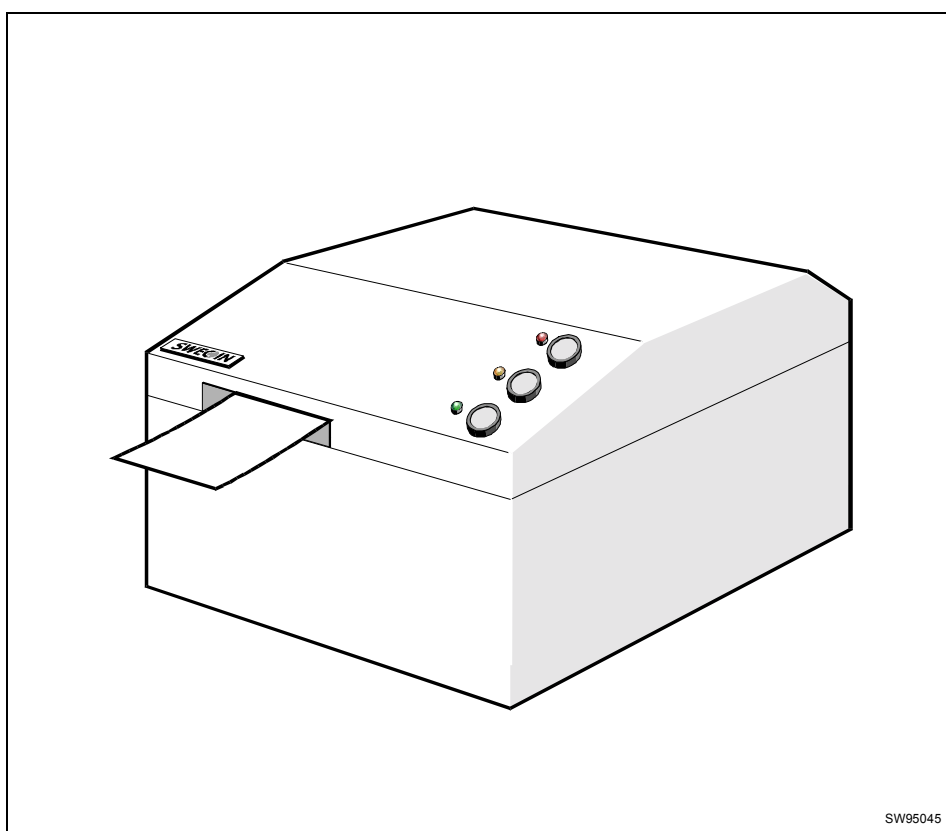

Related manuals

TTPM2 Selection Guide, 101193

TTPM2 Operators' Guide, 00861-000

TTPM2 Technical Specification, 00874-000

TTPM2 Installation and Programming Manual, 00759-000

TTPM2 Service Manual, 00693-000

This is a publication of Swecoin AB
Box 322, SE-192 30 Sollentuna, Sweden

Phone +46 8 623 45 60

Fax +46 8 594 709 89

E-mail techsupport@swecoin.se
sales@swecoin.se

Web site <http://www.swecoin.se>

© SWECOIN AB 2001

All rights reserved. Reproduction in whole or in parts is prohibited without written consent of the copyright owner. We have taken great care to ensure that the information in this manual is correct and complete. However, if you discover any errors or omissions, or if you wish to make suggestions for improvements, you are welcome to send your comments to us. Swecoin AB disclaims any liability resulting from the use of this information and reserves the right to make changes without notice.

Edition A, October, 2001

Printed in Sweden

This edition of the manual is based on firmware 906-350 and control board 2448-901.

CONTENTS

1 Introduction	4
2 Operation	5
2.1 Switching on	5
2.2 Operator controls	6
2.3 Loading tickets.....	7
3 Maintenance	9
3.1 Daily (performed by operator).....	9
3.2 Weekly (performed by trained operator or handyman).....	10
3.3 Annual (performed by technician).....	13
3.4 Cleaning products shopping list.....	13
4 Faultfinding.....	14
4.1 No tickets produced and yellow indicator ON.....	14
4.2 No/faint print	14
4.3 Barcode unreadable	14
4.4 Many encoding retries	15
4.5 Frequent paper jams.....	15
Striped tickets.....	15
4.7 Messages on your screen.....	16
4.8 Indicators on the printer	17
5 Corrective actions	18
5.1 General reset	18
5.2 Paper jam removal.....	18
5.3 Self test.....	19
6 Moving the printer	20
6.1 Secure shipping	20
6.2 Secure smooth paper path	20
6.3 Ensure interference free environment	21
6.4 Use correct serial cable	21
7 Ticket stock	22

This manual should help you maintain your printer in top condition over many years and hundreds of thousands of tickets.

The essence of this manual is that a clean printer is a reliable printer!

The regularity of the outlined maintenance is greatly affected by the ticket volume of your application. But is a good rule to spend a few minutes taking care of your printer before or after a big event, or when the day is over before you put out the light and go home.

2.1

Switching on

The power switch is on the rear right side of the printer. Do not press any other button when turning on the printer for normal operation.

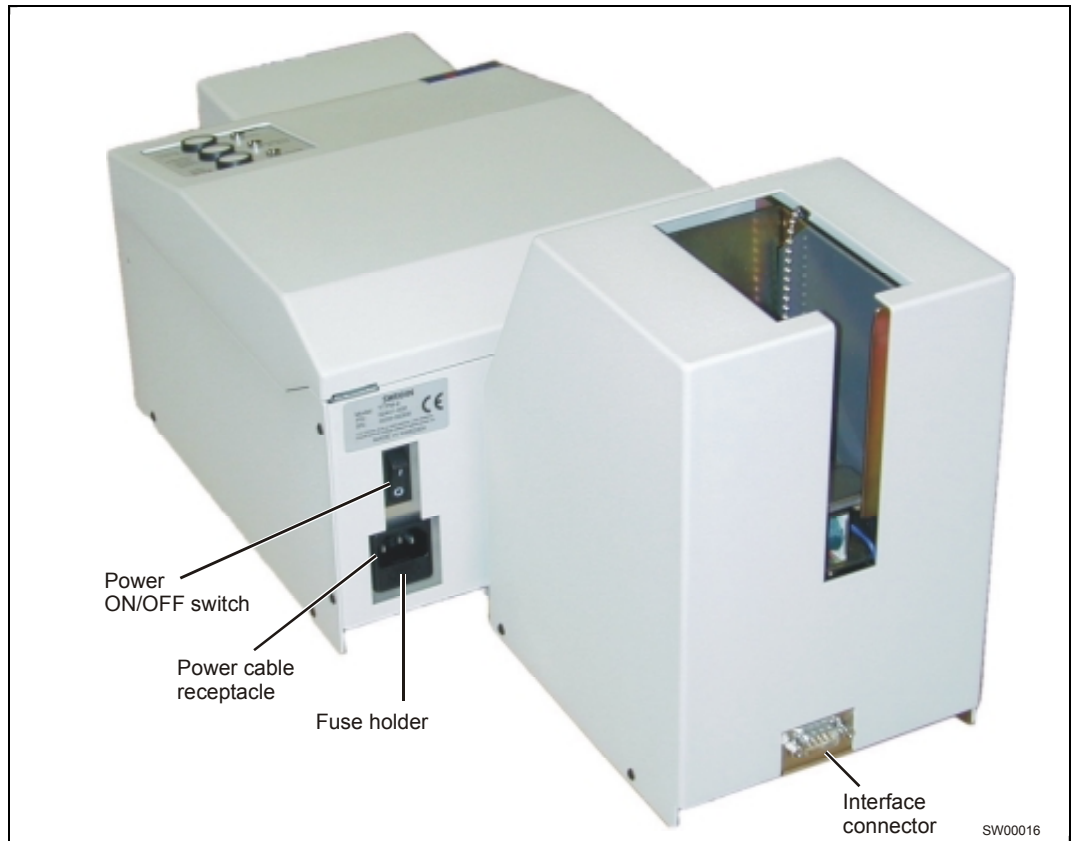


Figure 1. Position of the Power ON/OFF switch.

2.2

Operator controls

The front panel has three buttons and three indicators with the following functions.

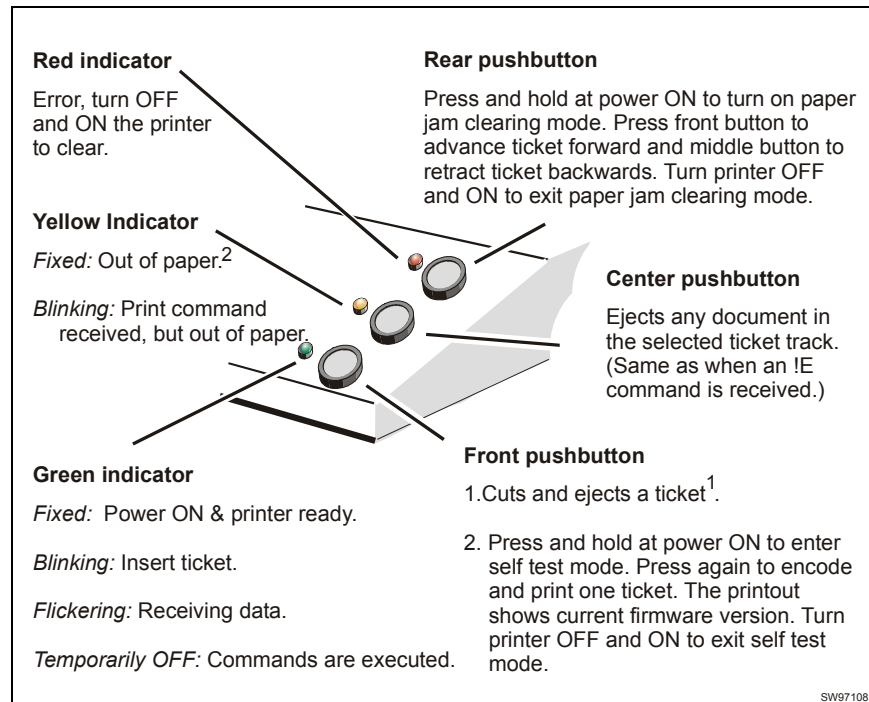


Figure 2. Indicators and pushbuttons

Using the buttons and indicators will be further explained later in this manual.

¹ **Do not** hold the front button depressed! Doing so will result in erroneously cut tickets often resulting in paper jam.

² On CD 200 versions, load new ticket stock, **then** press the center pushbutton.

2.3

Loading tickets

NOTE! – Do not turn off the printer to load tickets.

2.3.1

Single and dual track versions

- Position the tickets behind the printer with the magnetic stripe facing down on the left side of the printer.
- Insert the ticket material in the rear ticket entry until it stops.

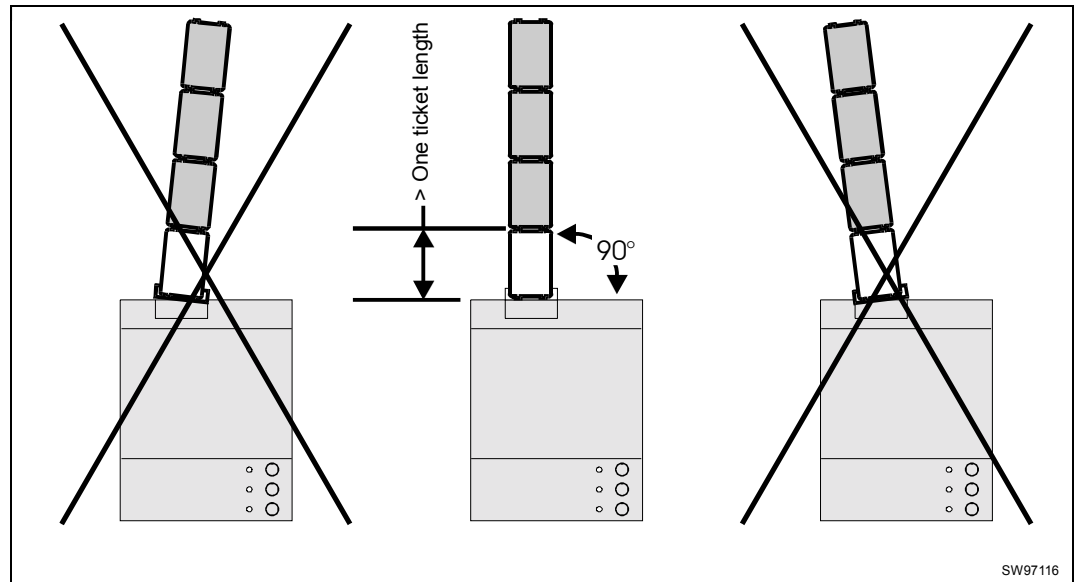


Figure 3. Positioning the ticket stock



CAUTION! – NEVER store the tickets on the floor. Stones that enter the printer together with the ticket material destroy the printhead.

CAUTION! – Make sure that the ticket path between the ticket material is free from hard edges

2.3.2

CD 200 version

- Load the tickets in the hopper with the magnetic stripe facing down and the railway symbol forward.
- Put the weight on top of the ticket pile.



Figure 5. Positioning the ticket stock

2.3.3

Front load versions

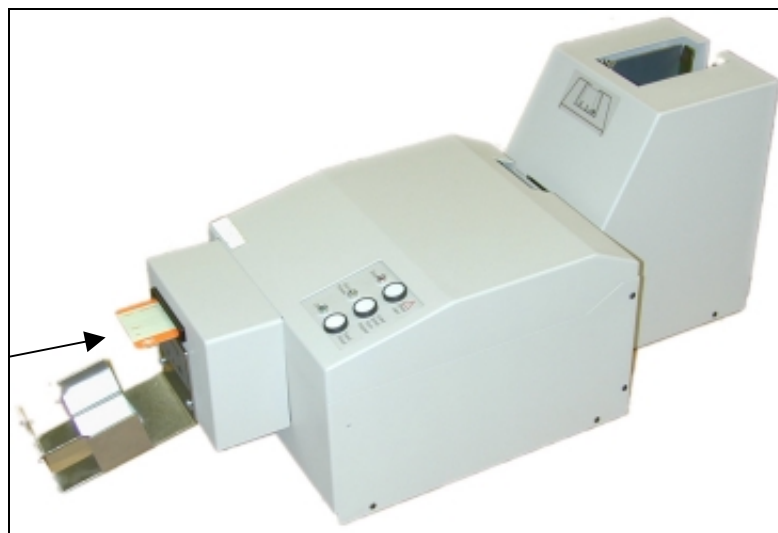


Figure 6. Loading a single ticket from the front.

3.1 Daily (performed by operator)

This should be carried out Daily in high print-volume environment and Weekly in low and medium volume environments

One Cardclene¹ cleaning card will be required for the following process

- Remove ticket stock.
- Eject ticket from inside the printer by pressing the button next to the green light.
- Insert Cardclene into the upper rear ticket entry (**A** in illustration) and press the front button (green). The ticket will be taken into the printer and ejected in the front.
For best results the card should be inserted at least 4 times, two in the upper and two in the lower ticket entry. The card is designed to remove debris i.e. paper dust. So therefore you are advised not to insert the card in the same way every time, it should be rotated before every insertion so that all surfaces are fully used.
- Finally reload the ticket stock and turn the printer on.

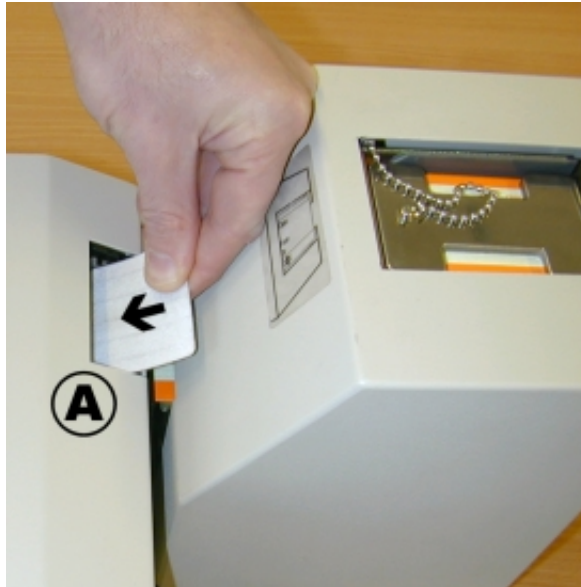


Figure 7. Inserting a cleaning card in rear ticket entry

¹ See page 13, "Cleaning products shopping list" for details.

3.2

Weekly (performed by trained operator or handyman)

This should be carried out Weekly in high print-volume environment and Monthly in low and medium volume environments

- Remove ticket stock.
- Eject ticket from inside the printer by pressing the button next to the green light.



Figure 8. Inserting a cleaning card in rear ticket entry and pressing it firmly.

- **On all printers:** Push the Cardclene into the Slot **A** as in photograph above left, and the card will be taken into the printer which will stop feeding when only 5mm is showing.

Press firmly down onto the card with your thumb as in photograph above right and press the button next to the green light. After 5 seconds lift your thumb to release the Cardclene and it will be ejected through the front slot.

- **On front load printers:** Holding the last 5mm of the Cardclene firmly, insert it into the front hopper and issue a “load ticket from front”-command !L3.

The printer will try and pull the card in, but if you hold onto it firmly enough so that all but the last 5mm is pulled in, it will give an error after approx. 5 seconds, and the appropriate roller will have been cleaned. Turn off and on the printer to remove the Cardclene.

- **On CD-200 versions:** Insert the Cardclene into the empty card dispenser and place the weight on top of it.
Turn the printer off and on and after approx. 20 seconds the cleaning process will stop.
Remove the card and turn the printer off.

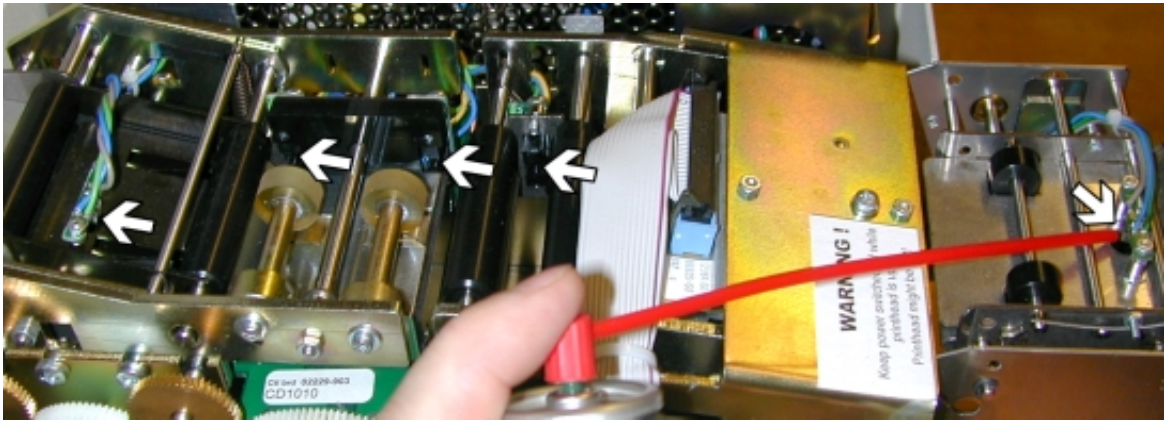


Figure 9. Blow the dust from the sensors.

- Raise the lid, and using the air duster, point the nozzle at each of the 5 visible sensors see photograph above and blow very briefly.

Next clean the rollers that are indicated in the below photo:

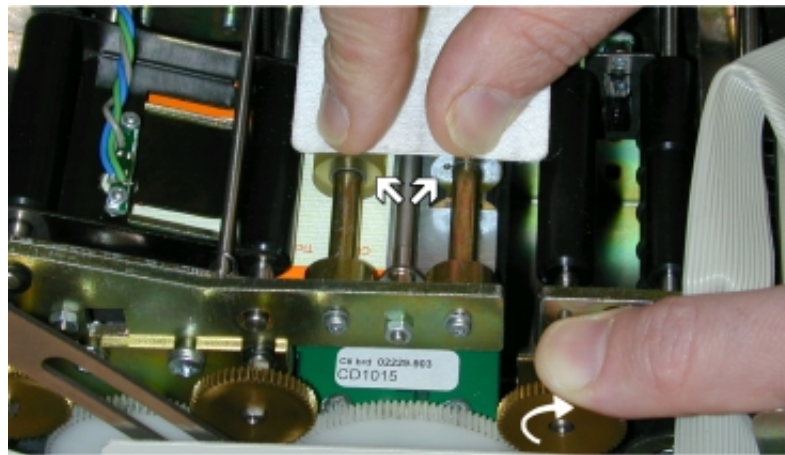


Figure 10. Clean the rubber rollers.

- Close the lid, insert ticket stock into the rear hopper, turn the printer on and a ticket will be fed into the machine.
- Turn the printer off and lift the lid.
- Place the Cardclene onto the indicated rollers using only a slight amount of pressure, and manually (with your thumb as shown in the photograph on the right) turn the brass gear so that the ticket is fed forwards and the rollers are rotated. The pressure applied to the Cardclene will clean the necessary rollers.
- Close the lid and turn the printer on. The ticket will be ejected and another will take its place.

Next clean the roller attached to the brass gear used above:

- Turn the printer off, open the lid, and lift the printhead.

CAUTION! – The printhead is sensitive to scratches and static electricity. NEVER use tools of any kind against the printhead.

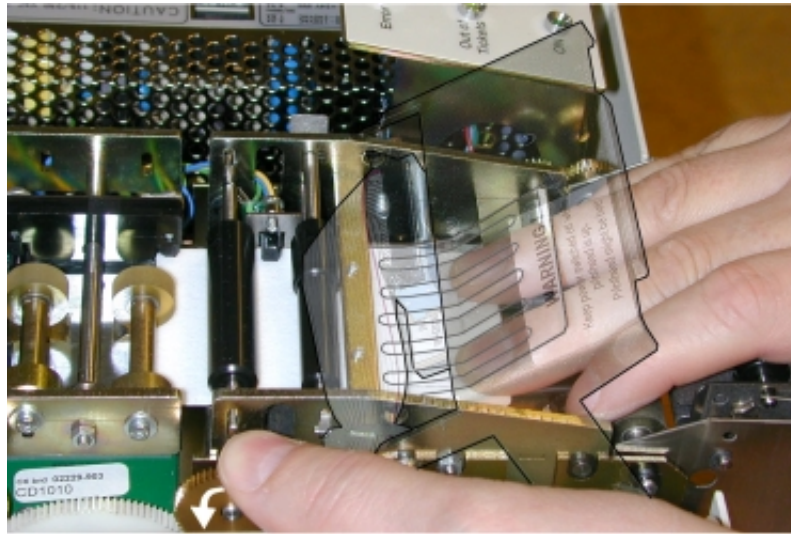


Figure 11. Cleaning the drive belts.

- Insert the Cardlene under the clear plastic flap below the printhead and manually rotate the brass cogwheel so that the leading edge of the cleaning card passes the roller, see photograph on the right.
- Hold the card with your right hand whilst rotating the brass cogwheel a couple of full times.
- Remove the Cardlene and lower the printhead
- Lower the printhead to normal position.
- Close the lid and turn the printer on.
- Wipe of the outside surfaces of the printer.
- Load tickets.
- Make a test printout to see that the printer functions correctly.
- If you used the self-test to do the test printout, turn OFF and ON the printer afterwards, and the printer is ready for another week of hard work!

The printer is now ready for use.

3.3

Annual (performed by technician)

- Disconnect the power and interface cable.
- Remove the cover.
- Check that screws are tightened and inspect rubber belts and rollers for wear and cracking.
- Check that the cogwheels align properly and are firmly fixated on their shafts.
- Check for missing circlips.
- Check that you can rotate the rollers over the magnetic heads when no ticket is inserted between head and roller.
- Enter a single ticket into the lower rear input. Turn the rear cogwheels to feed the ticket in over the magnetic module until the rear of the ticket passes the home position sensor. Check that you cannot easily rotate the rollers over the magnetic heads.
- Turn the rear cogwheels the other way around and check that the ticket goes up to the upper rear upper track.
- Forward the ticket again as much as possible while checking that it passes between the rollers after the cutter without slipping.
- Hold down the plunger of the front solenoid and turn the largest of the front cogwheels on the right.
- Check that the ticket enters between the platen and the printhead without slippage, then remove the ticket.
- Check the position of the springs. They should be as close together as possible.
- Remove any dust that has fallen down into the printer.
- Make a weekly maintenance.
- Reassemble the printer.
- Make test tickets while watching the tickets move through the printer. If ticket transport hesitates, check the width adjustment of that part of the ticket track.

After completing this, the printer is as good as new!

3.4

Cleaning products shopping list


- ❑ Isopropanol solvent impregnated cleaning cards (AF Cardclene)
- ❑ Compressed air spray can (AF Sprayduster)
- ❑ Vacuum cleaner with computer type hose and brush set (Pullman Mini Vac PVB 2)
- ❑ Pure Isopropyl alcohol 99.7% (AF Isoclene)
- ❑ Rubber-roller restorer-fluid (AF Platenclene PCL 100)
- ❑ Lint free cleaning cloth (AF Safewipes)

Cleaning products can be purchased from various suppliers around the world. The AF-products within parenthesis in the list above are examples from AF Computer Cleaning Products, see www.af-net.com.

4 FAULTFINDING

4.1 No tickets produced and yellow indicator ON

Load ticket stock in the selected ticket track.

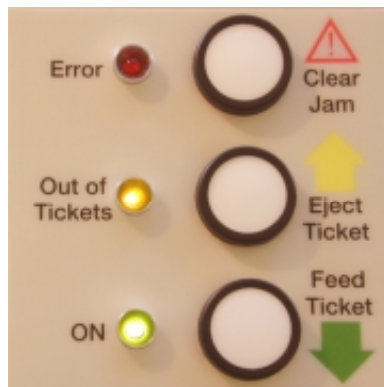


4.2 No/faint print

- Check that the ticket material is thermally coated by swiftly striking your nail across the ticket. This should produce a black line.
- Make a self-test printout to check that the printer prints without use of the host computer.
- Check that the printhead pressure plate is lowered fully.

4.3 Barcode unreadable

- Clean the printhead.
- Make test printout to check that the line across the paper has no gaps in the width used by the barcode (all pixels in the test line are black).

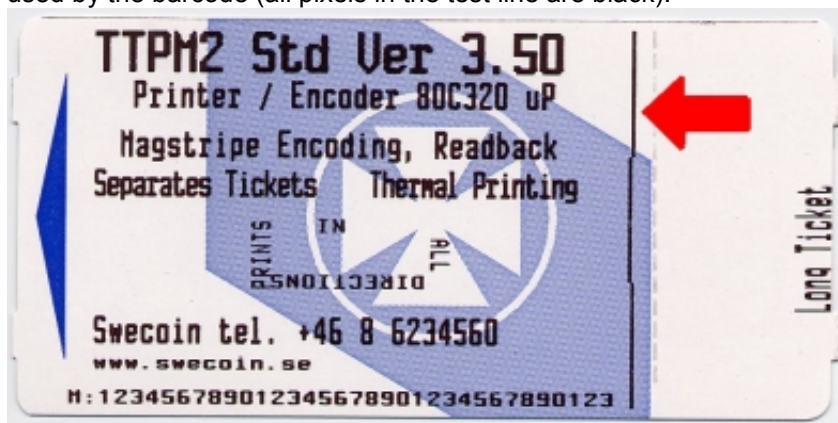

CAUTION! – NEVER store the tickets on the floor. Stones that enter the printer together with the ticket material destroy the printhead.

4.4 Many encoding retries

- Bad stripe material on ticket.
- Wrong ticket thickness.
- The ticket material hooks onto something on its way into the printer¹.
- Dirt buildup on feed rollers.
- Erroneously adjusted magnetic rollers.

4.5 Frequent paper jams

- The ticket material hooks onto something on its way into the printer¹.
- Ticket material too wide (wider than 54.3 mm).
- Slipping ticket transport due to dirt buildup on rollers or drive belts.
- Worn or missing drive belts.

4.6 Striped tickets

- Ticket material without magnetic stripe.
- Magnetic stripe on the wrong side. Should be facing downwards on the left side of the printer as seen from the ticket exit. (In the center facing down on center track printers.)
- The ticket material hooks onto something on its way into the printer¹.
- Misadjusted rollers over the magnetic heads.



¹ Take some tickets and put them on the lid of the printer. Load them into the printer and print tickets. If the problem now is gone, the ticket path to the printer is the cause of the problem.



4.7

Messages on your screen

The printer communicates with the host computer that runs your ticket booking software. This means that any condition that occurs in the printer should be taken care of by the software in such a way that you get the guidance you need to solve the situation.

4.7.1

Errors reported by the printer

- 1) Out of tickets. Please load tickets in the lower rear input.
- 2) Out of tickets. Please load tickets in upper rear input.
- 3) Paper jam when fetching ticket from lower rear input. Please make sure that the tickets can move freely into the printer.
- 4) Paper jam when fetching ticket from upper rear input. Please make sure that the tickets can move freely into the printer.
- 5) Cutter error. No full cut performed. Please clear paper jam in cutter.
- 6) Cutter error. Cutter blade not returned to home position. Please clear paper jam in cutter, and turn OFF, then ON the printer to return the cutter to home position.
- 7) Cutter error. Cutter blade not moving. Please clear paper jam in cutter, and turn OFF, then ON the printer.
- 8) Paper jam when trying to print the ticket. Please clear the paper jam.
- 9) Magnetic encoding on track 2 (or center track) failed. Check that the stripe on the ticket stock is positioned to the left of the printer as seen from the ticket exit.
- 10) Magnetic encoding on track 1 or 3 failed. Check that the stripe on the ticket stock is positioned to the left of the printer as seen from the ticket exit.
- 11) Not possible to read magnetic information on inserted ticket. Make sure the ticket is inserted correctly.
- 12) No document inserted within time limit for a front load. Please Retry.
- 13) Ticket inserted through front load but immediately retracted. Please feed the ticket in again.
- 14) Ticket inserted through front load is blocked. Please clear the front load input.
- 15) Unable to retract the ticket from the front load.
- 16) Old ticket found in the ticket path during power on. It has been erased, VOID-printed and ejected.
- 17) Critical error. The printer must be turned OFF, error condition cleared, then turned ON again.


4.7.2

Acknowledges reported by the printer

- 1) Ticket stock is available in the selected ticket track.
- 2) The magnetic encoding was successful.
- 3) The ticket is ready to be printed (encoded and cut).
- 4) The last line of the printable area has been printed successfully.

Indicators on the printer

Different error types can show up during processing. The most common is that the TTPM2 is out of paper. All errors encountered by the printer, and requiring operator assistance, are indicated with a signal from an indicator on top of the printer. The operator then has to follow a specific procedure depending on the type of error that caused the stop. The procedures are as follows:

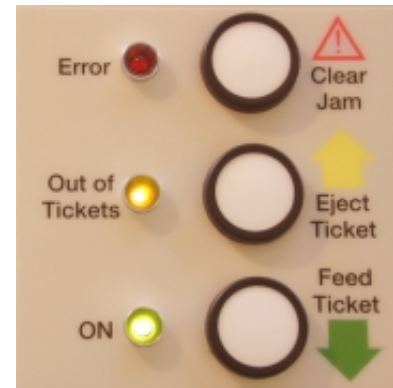

- **Yellow indicator lights up**

Indicates "No paper" in the selected paper entry. Insert new paper supply or new - single ticket. The document will be automatically loaded to active position.

- **Yellow indicator ON and green indicator ON or flashing.**

No paper in the selected paper entry. Ticket data has been received. Insert paper into the selected paper entry.

- **Red indicator lights up**

Indicates unsuccessful read-after-write of the magnetic encoding. The TTPM2 makes a second attempt to encode and read the ticket. During that attempt the red indicator will go out. For each unsuccessful attempt, the red indicator lights up again.

- **Red indicator is ON**

If the Red indicator stays ON, even though ticket stock is present in the selected entry, this indicates that the paper path in the TTPM2 has been blocked. Follow the description on the next page to remove the paper jam.

NOTE! No data is lost in the process of detecting and acting on errors as long as the printer is not switched OFF. If, however, the printer is switched OFF by mistake when an error is attended to, two tickets will normally be lost because of the error:

- 1) The ticket being printed will be lost.
- 2) The next ticket will be lost.

The reason for the next ticket being lost is that even though the printer has battery backed up memory which preserves data, it is not possible to guarantee that no data is lost in the serial communication during the power OFF condition. It is, therefore, necessary for the printer to erase the input buffer and wait for either a clear or print command before it can synchronize printing to incoming data.

5 CORRECTIVE ACTIONS

5.1 General reset

A general reset of the TTPM2, restoring all parameters to their default value, is effected if all three pushbuttons are kept depressed at power ON. All three indicators will light but nothing else will happen. At this point, the power has to be turned OFF and ON once more. The TTPM2 is then reset.

5.2 Paper jam removal

Open the TTPM2 cover to locate and remove the ticket that is stuck in the mechanism. Use the following procedure:

5.2.1 Select paper jam clearing mode

1. Power OFF.
2. Push and hold the rear pushbutton while turning ON the power. The red indicator shows a steady light to indicate paper jam clearing mode.

5.2.2 Tickets stuck in rear of the printer

Press and hold the center push button to eject the ticket towards the rear of the unit.

5.2.3 Tickets stuck in front part of the printer


Press and hold the front push button to eject the ticket towards the front of the unit.

5.2.4 Exit paper jam clearing mode

Power OFF and back ON again, the TTPM2 is operational but any ticket information previously sent to the unit is lost.

5.2.5 Manual cranking

You can also power OFF the printer and turn the feed rolls manually to remove the blocking ticket.

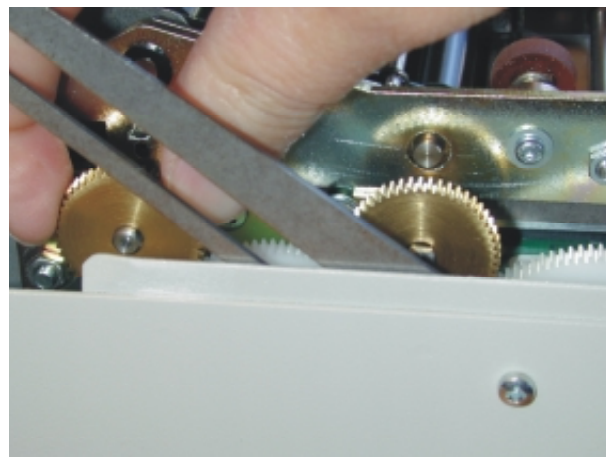

5.2.6

Lifting the printhead

Push the printhead release lever forward while lifting the printhead. Release the lever when the printhead is lifted.

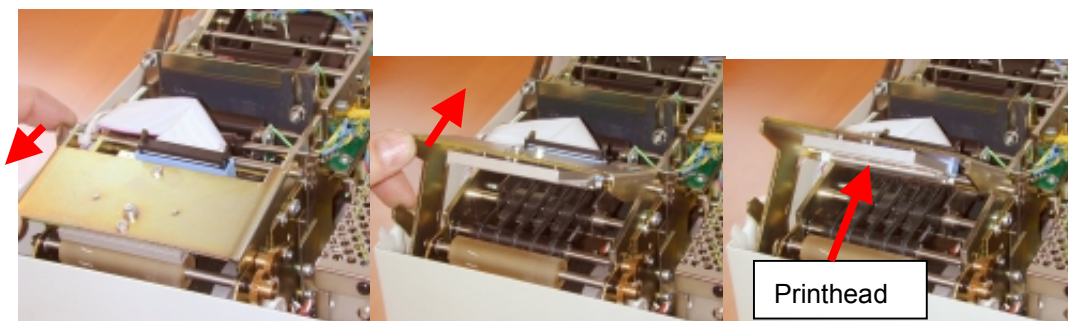


Figure 12. Lifting the printhead.

Now the paper path is relieved and you can remove any stuck ticket, and clean the printhead.

CAUTION! – The printhead is very sensitive to static electricity and to scratches. NEVER use any tool on the printhead. To clean it, use a soft piece of cloth and pure isopropyl alcohol.

5.3

Self test

1. Press and hold the front pushbutton at power ON to enter self-test mode.
2. Press again to encode and print one ticket. The printout shows current firmware version.
3. Turn printer OFF and ON to exit self-test mode.

The green indicator lights up at power ON. Should it fail to light up, switch the TTPM2 OFF and back ON again. If the green indicator is still OFF, check your power connection both in the TTPM2 and in the wall outlet. Also check your main power supply fuse.

6

MOVING THE PRINTER

If you plan to move the printer follow the steps below to avoid unpleasant surprises.

6.1

Secure shipping


Always ship the printer in its original packing material. If you lost it, order new from Swe-coin.



6.2

Secure smooth paper path

The ticket material must not hook onto anything on its way into the printer. All edges that the ticket material passes must be smooth and with large radius.

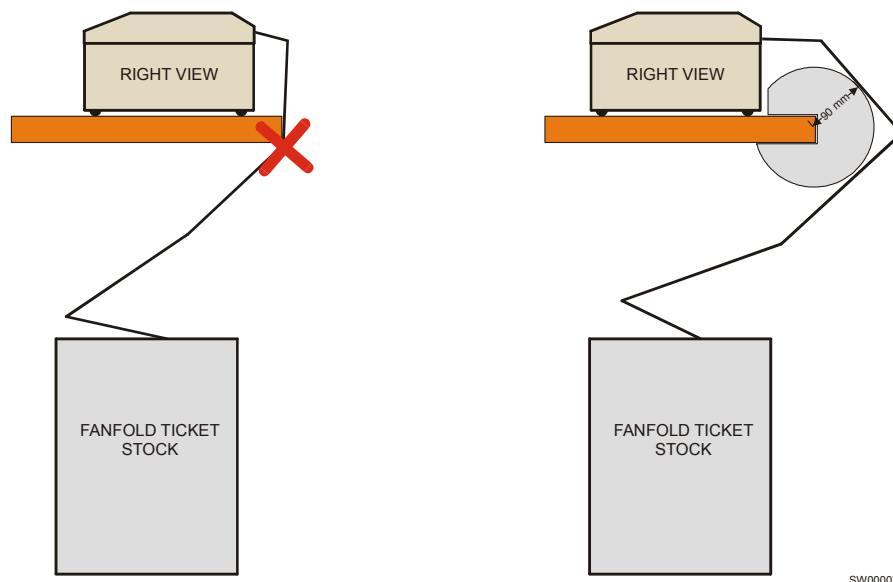

CAUTION! – NEVER store the tickets directly on the floor. Stones that enter the printer together with the ticket material destroy the printhead

6.3 Ensure interference free environment

The new location must be without electrical and magnetical interference. The printer must be connected to a grounded power socket. Add a power line conditioner, and proper screening if necessary.

6.4 Use correct serial cable

Use a correctly configured serial interface cable between the printer and host computer. The printer may print single tickets correctly with other cables but when batch printing tickets the loss of handshaking gives incorrect number of tickets or misprinted tickets.

The TTPM2 printers are produced, calibrated for, and tested with the customers ticket stock.

When you receive new ticket stock from your supplier; please take a moment to check that the newly delivered tickets have the correct measurements. This may save you from endless paper jams.

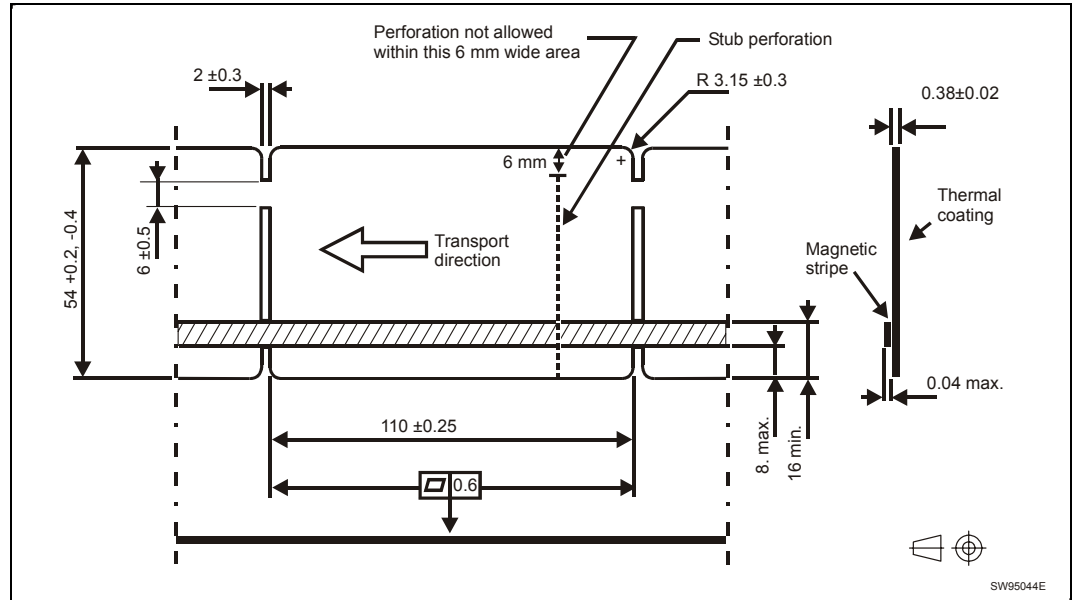


Figure 13. Gapped 110 mm tickets

Thickness	$0.18, 0.25$ or 0.40 ± 0.02 mm
Width	53.6 to 54.2 mm (most critical parameter!)
Length	86 or 110 ± 0.25 mm
Corner radius	$3.15 + 0.3$ mm/-0 mm. Used for optical detection of top-of form and cut.